


Parts List - Model 4618239

Key Qty.	Description	Part #
A 2	Tent Frame	4151014
B 1	Warming Rack	4152043
C 1	Giddle	4152038
D 1	Cooking Grid, 12"	4152045
E 1	Cooking Grid, 15"	4152046
F 2	Wheel	4156957
G 2	Burner Tent	4500226
H 1	Upper Panel	4502072
I 1	Lower Panel	4502073
J 1	Tank Support	4502098
K 1	Tank Retainer	4502113
L 2	10x1/2" Screw, Self-tap	4080043
M 2	Pivot Pin	4080066
N 2	3/16 Pal Nut	4153096
O 1	Ignitor Wire	4153184
P 2	Leg Extender	4154516
Q 1	Right Leg	4502158
R 1	Left Leg	4502159
S 2	3/4" Hitch Pin	4156515
T 1	Carry-over Tube	4500227
U 1	Console Assembly	4530033
V 1	Rotary Ignitor	4153187
W 1	Ignitor Knob	4154208
X 1	Grill Bottom	4580316
Y 2	Burner	5068016
Z 1	Right Shelf Assembly	4520011
AA 1	Left Shelf Assembly	4520012
BB 1	Grill Top	4570033
CC 1	Shield	5501038

Key Qty.	Description	Part #
DD 2	Control Knob	4154507
EE 1	Hardware, Cart Assy.	4254007
FF 1	Hardware, Shelf	4254010
GG 1	Grease Clip	5156607

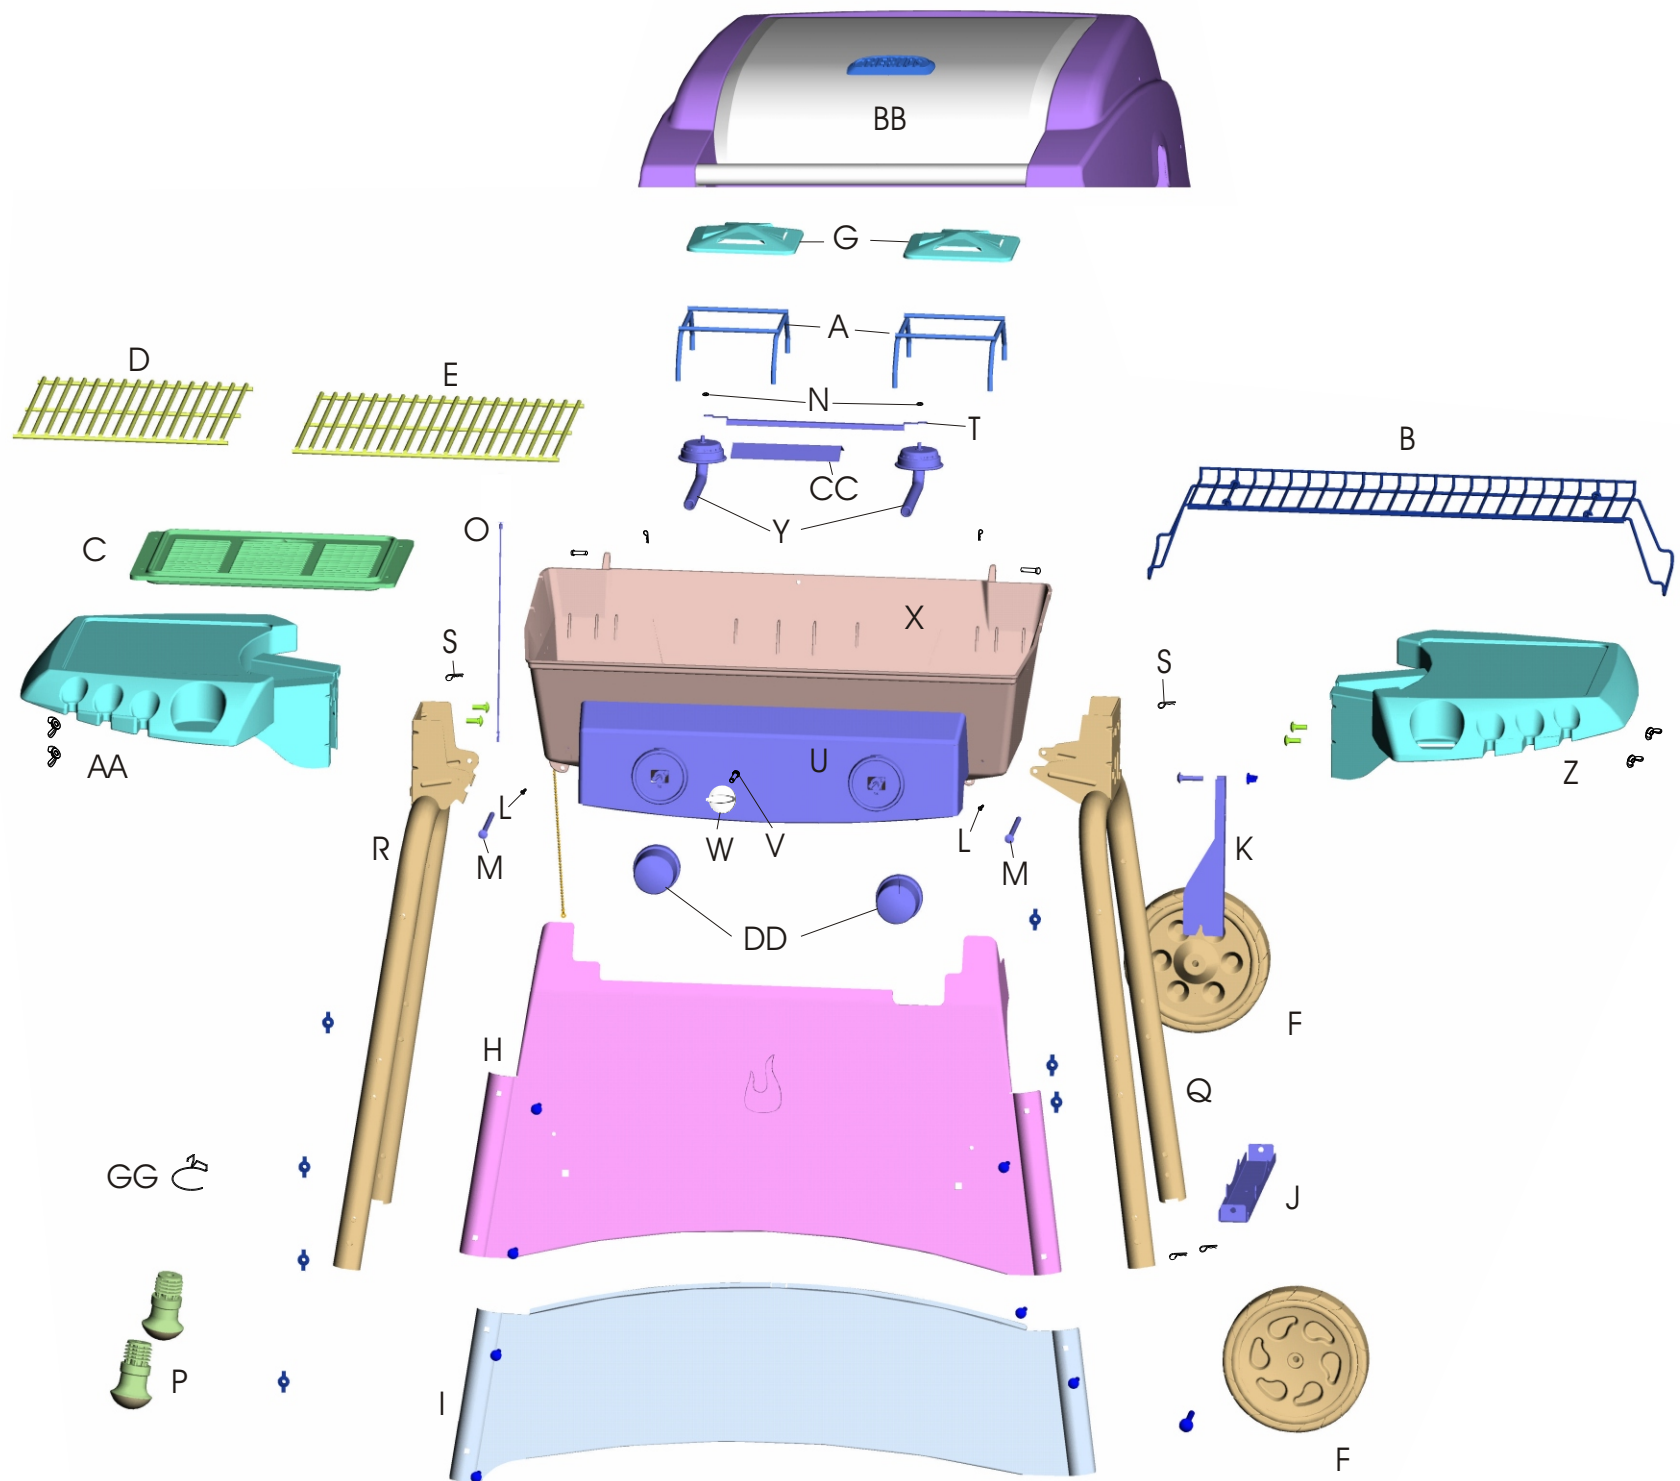

NO  
TOOLS  
REQUIRED

**the Big Easy**  
THE GRILL THAT COOKS  
BREAKFAST  
LUNCH AND DINNER

**the Big Easy**  
8000 SERIES  
4618239  
ASSEMBLY MANUAL



THIS GRILL IS FOR  
OUTDOOR USE ONLY

**CAUTION:** Read and follow all safety  
statements, assembly instructions,  
and use and care directions before  
attempting to assemble and cook.

**INSTALLER/ASSEMBLER:** Leave  
these instructions with consumer.

**CONSUMER:** Keep this manual for  
future reference.

**WARNING**

Failure to follow all manufacturer's  
instructions could result in serious  
personal injury and/or property  
damage.

**CAUTION**

Some parts may contain sharp edges  
— especially as noted in the manual!  
Wear protective gloves if necessary.

If you have any questions or need  
assistance during assembly, please  
call 1-800-241-7548.

**THERMOS**